Quick Installtion Guide for AVer MediaCenter

Installing Drivers and AVer MediaCenter

After the device is installed properly, turn on the computer. The system will automatically detect the new device. Simply skip the wizard, and insert the accompanying installation CD to install the driver and TV software utility simultaneously.

Installing Drivers and AVer MediaCenter Application in Windows Vista™

1. The "Found New Hardware Wizard" dialog box will appear. Just click **Cancel** to skip the Wizard installation procedures.
2. Place the installation CD into the CD-ROM drive.
3. When the "AutoPlay" dialog box appears, select **Run Autorun.exe**.
4. When the installation main screen appears, choose **Install AVer MediaCenter**.
5. If the "User Account Control" dialog box appears, select **Allow** to continue the process.
6. Click **Next** to continue the installation process.
7. Read the license agreement and if you agree to the terms, select "I accept the terms of the license agreement" and then click **Next**.
8. Choose **Complete** to install all the necessary softwares, including **AVerTV MediaCenter**, **Acrobat Reader**, **DirectX 9.0c** and **Driver**. Then click **Next.** For advanced users, it is recommended that you choose **Custom** to select the software you want. To choose a different destination folder, click **Browse**.
9. Then click **Finish** to complete the installation.

Installing Drivers and AVer MediaCenter Application in Windows XP/ Windows XP Media Center Edition

1. The "Found New Hardware Wizard" dialog box will appear. Just click **Cancel** to skip the Wizard installation procedures.
2. Place the installation CD into the CD-ROM drive.
3. When the installation main screen appears, choose **Install AVer MediaCenter.**
4. Click **Next** to continue the installation process.
5. Read the license agreement and if you agree to the terms, select "I accept the terms of the license agreement" and then click **Next**.
6. Choose **Complete** to install all the necessary softwares, including **AVer MediaCenter**, **Acrobat Reader**, **DirectX 9.0c** and **Drivers.** Then click **Next**. For advanced users, it is recommended to choose **Custom** to select the software you want. To choose a different destination folder, click **Browse**.
7. In the "InstallShield Wizard" dialog box, if you are instructed to restart your computer, select **Yes**. Then click **Finish** to complete the installation.

NOTE:

1. If DirectX 9.0c or above is not installed in your system, usually the installation CD will automatically install it during the process of installation. Make sure your system has DirectX 9.0c or above installed so that the TV software utility can function properly.
2. If your system is not equipped with Acrobat Reader, the installation wizard will automatically be called up during the process of installation.

Activating the AVer MediaCenter Application

We recommend **Windows XP MCE/Windows Vista MCE** users exit the Windows Media Center mode before

activating the AVerTV MediaCenter.

To run the application from the Programs menu, choose **Start → Programs → AVerMedia → AVer MediaCenter → AVer MediaCenter**.

Uninstalling Application and Drivers

-- Windows XP / Windows XP Media Center Edition--

If you are in Media Center Mode, please exit and switch to Windows mode first. To remove the installed TV software utility from the system, simply choose **Start → Programs → AVerMedia → AVer MediaCenter → Uninstaller → Remove All → Next → OK → Finish.**

--Windows Vista™ --


1. To remove the installed TV software utility from the system, simply choose **Start → Programs → AVerMedia → AVer MediaCenter.**
2. Click **Uninstaller**.
3. When the "User Account Control" dialog box appears, select **Allow**.
4. Select **Remove All → Next→ OK → Finish**.

Remote Control

After installing drivers and applications, you can use a remote control to turn on/off the programs, select channels, adjust volume and so on.


Note:
This remote control supports some of the basic functions of AVer MediaCenter application only. For full support, we suggest purchasing AVer MediaCenter full featured special remote control package. For detail information, please visit http://www.avermedia.com.

RM-HR：

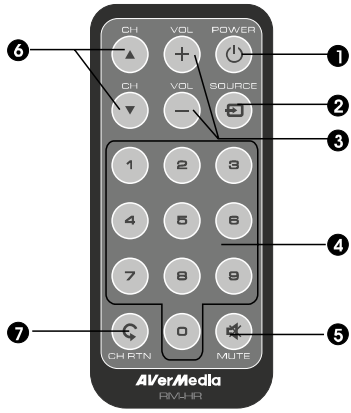

	Button	Description
(1)	POWER	Turn on/off the application
(2)	SOURCE	Change between available signal sources.
(3)	VOL + / VOL −	Volume up / Volume down.
(4)	1 2 3 4 5 6 7 8 9 0	Use numeric buttons to select a channel.
(5)	MUTE	Turn on/off the sound.
(6)	VOL + / VOL −	Channel up and channel down.
(7)	CH RTN	Return to previously accessed channel.


RM-JX：

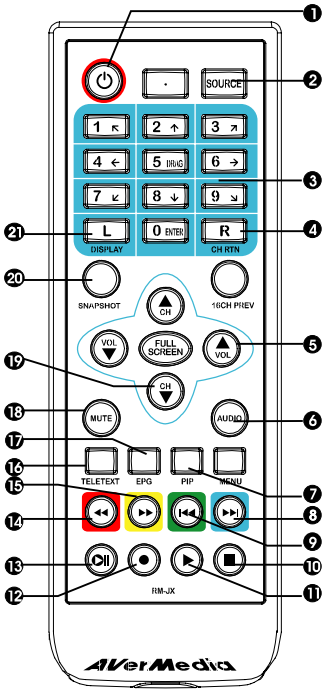

	Button	Description
(1)		Turn on/off the application
(2)	SOURCE	Change between available signal sources.
(3)	1 2 3 4 5 6 7 8 9 0 ENTER	Use numeric buttons to select a channel.
(4)	R CH RTN	Return to previously accessed channel.
(5)	VOL VOL	Volume up / Volume down.
(6)	AUDIO	Switch between available audio modes.
(7)	PIP	Activate the Picture in Picture(PIP) / Multi-Channel Display function.
(8)		Go to the next item in the playlist.
(9)		Go to the previous item in the playlist.
(10)		Stop the playback, recording, TimeShift, etc.
(11)		Play the selected file or temporarily freeze the playback.
(12)		Record the current program.
(13)		Switch from real-time TV or Radio to TimeShift mode.
(14)		Move backwards in intervals.
(15)		Skip forward in intervals.
(16)	TELETEXT	View Teletext / Close Caption information.
(17)	EPG	View EPG information.(This function is only available for digital TV and radio)
(18)	MUTE	Turn on/off the sound.
(19)	CH CH	Channel up and channel down.
(20)	SNAPSHOT	Capture an image or a continuous sequence of images.
(21)	L DISPLAY	Display the current program's information.

AVer MediaCenter

RM-FP:

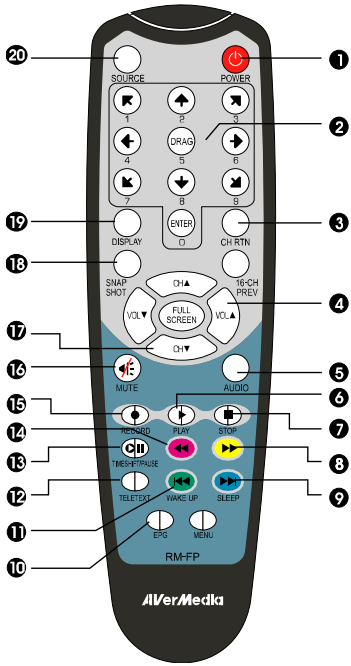

	Button	Description
(1)	POWER	Turn on/off the application
(2)	1 2 3 4 DRAG 5 6 7 8 9 ENTER 0	Use numeric buttons to select a channel.
(3)	CH RTN	Return to previously accessed channel.
(4)	VOL▼ VOL▲	Volume up / Volume down.
(5)	AUDIO	Change between available audio modes.
(6)	PLAY	Play the selected file or temporarily freeze the playback.
(7)	STOP	Stop the playback, recording, TimeShift, etc.
(8)		Skip forward in intervals.
(9)	SLEEP	Go to the next item in the playlist.
(10)	EPG	View EPG information. (This function is only available for digital TV and radio)
(11)	WAKE UP	Move backwards in intervals.
(12)	TELETEXT	View Teletext / Close Caption information.
(13)	TIMESHIFT/PAUSE	Switch from real-time TV or Radio to TimeShift mode.
(14)		Move backwards in intervals.
(15)	RECORD	Record the current program.
(16)	MUTE	Turn off/on the sound.
(17)	CH▲ CH▼	Channel up and channel down.
(18)	SNAP SHOT	Capture an image or a continuous sequence of images.
(19)	DISPLAY	Display the current program's information.
(20)	SOURCE	Change between available signal sources.